

MA 00031

2021-03-09 | 4

SAP: 6000004074



Sortimo[®]
Intelligent Mobility

Sortimo TopSystem

1000005337 | REKA97-2P

Renault KANGOO Rapid 2012
Mercedes-Benz Vans Citan 2012

da-DK **Vigtigt!** Læs og forstå den vedlagte sikkerhedsbrochure.

de-DE **Wichtig!** Lesen und verstehen Sie die beiliegende Sicherheitsbroschüre.

en-EN **Important!** Read and ensure that you have understood the enclosed safety brochure.


es-ES **¡Importante!** Asegúrese de leer y entender el folleto de seguridad adjunto.

fr-FR **Important !** Lisez attentivement la brochure de sécurité ci-jointe pour bien la comprendre.


no-NO **Viktig!** Les og forstå den vedlagte sikkerhetsbrosjyren.

nl-NL **Belangrijk:** Zorg ervoor dat u de bijgevoegde veiligheidsbrochure hebt gelezen en begrepen.



sv-SE **Viktigt!** Se till att läsa och förstå den bifogade säkerhetsbroschyren.

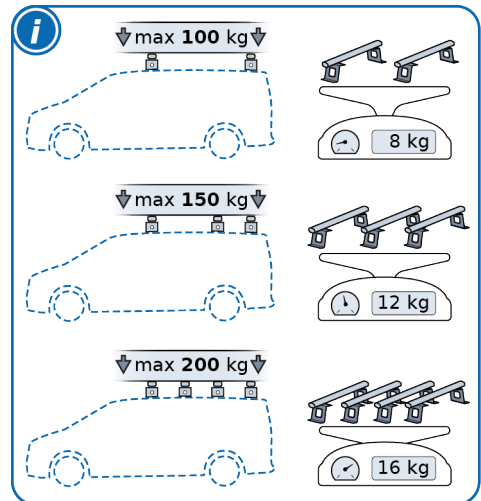







1

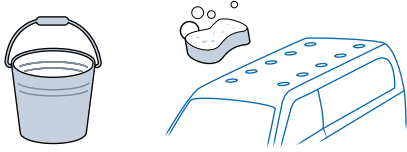


2

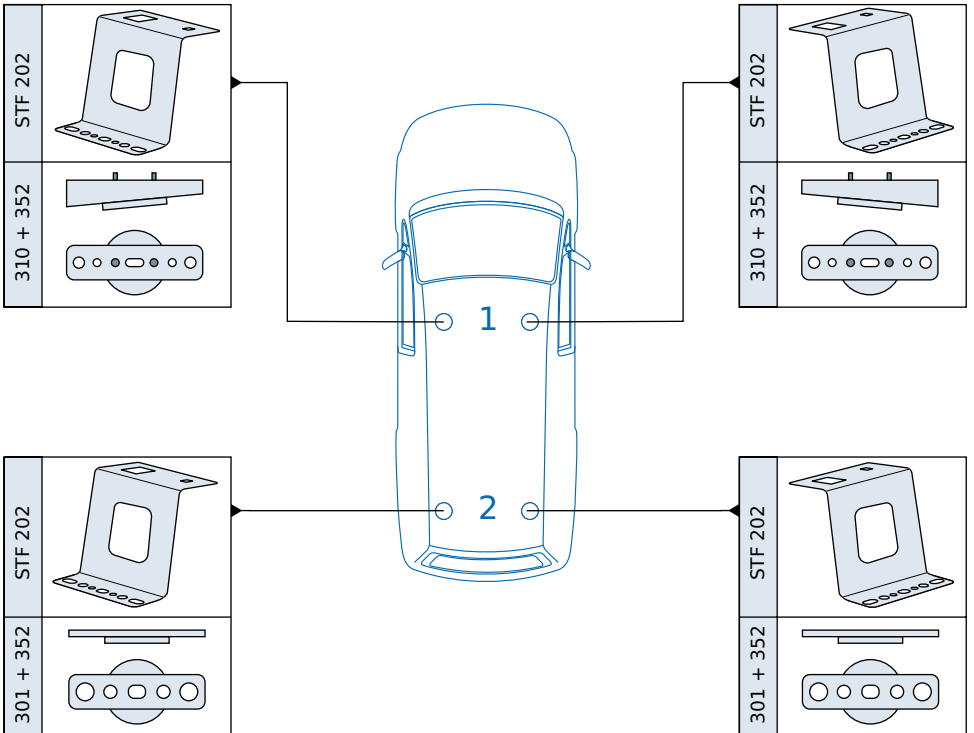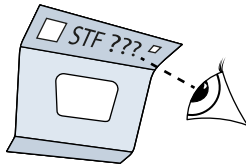


3

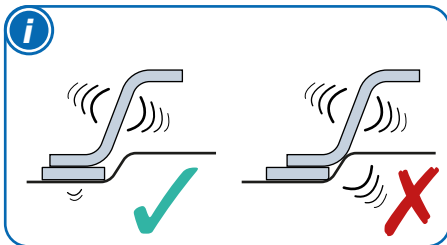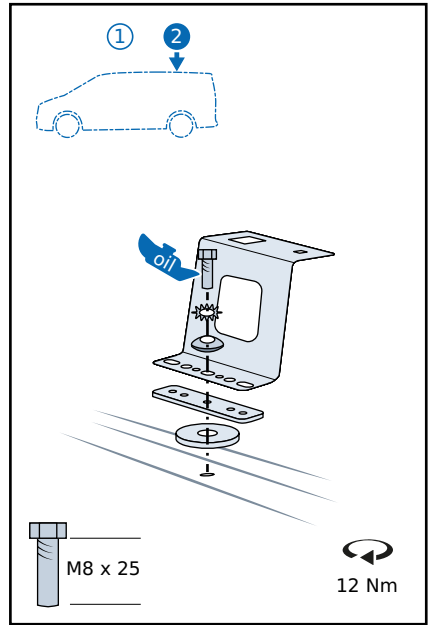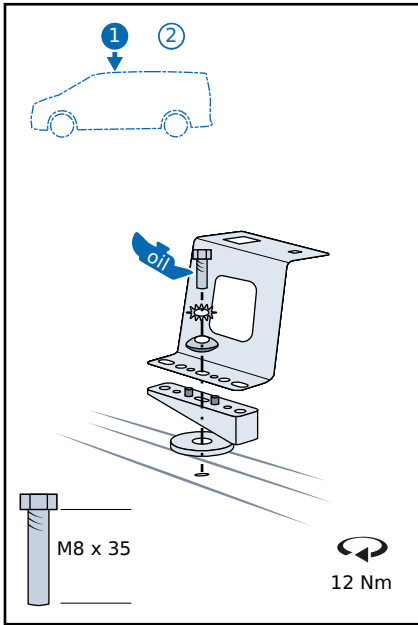



4

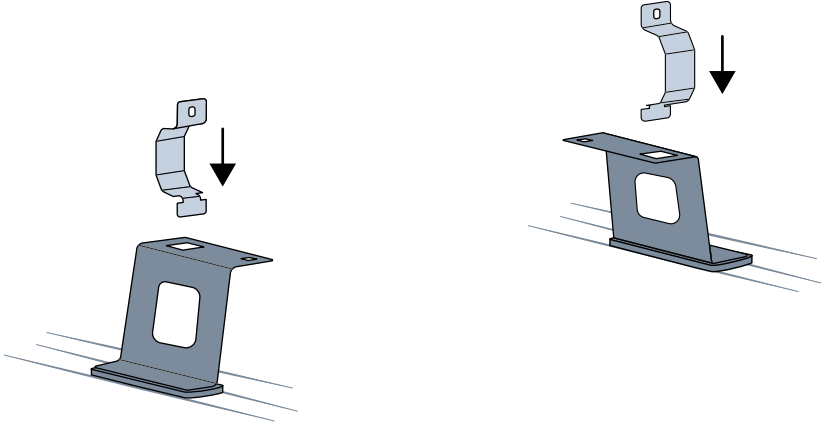


5

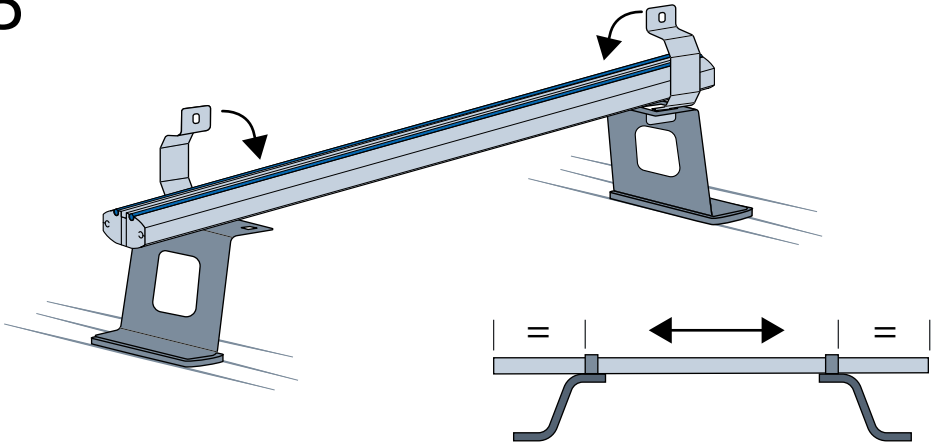



6

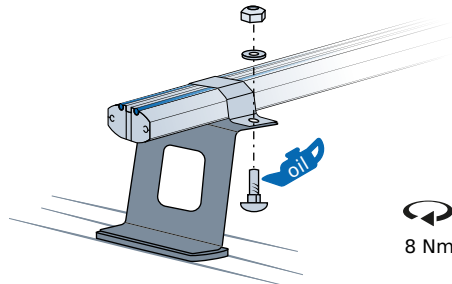



7



8

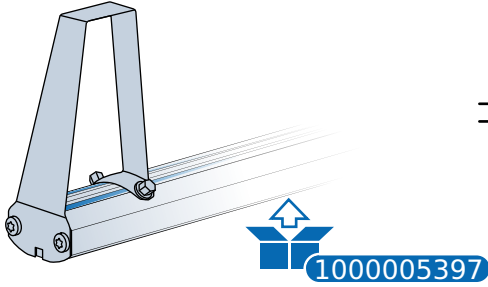


9-11

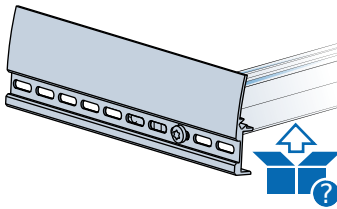


12-13


8

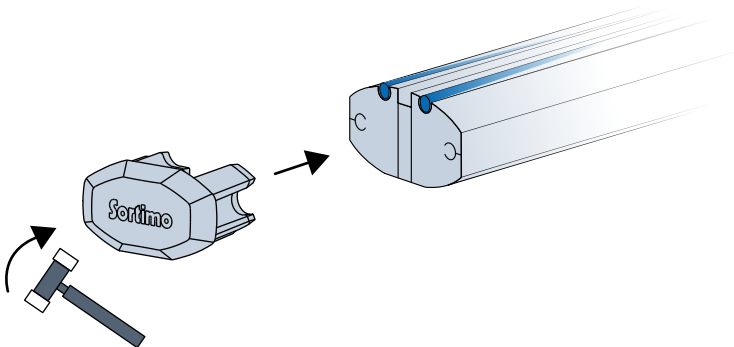



9

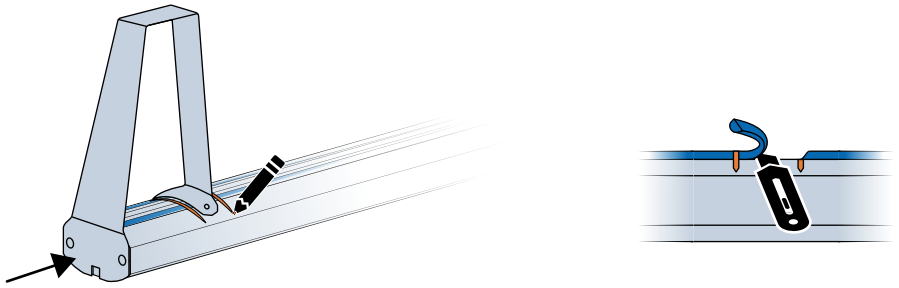


10

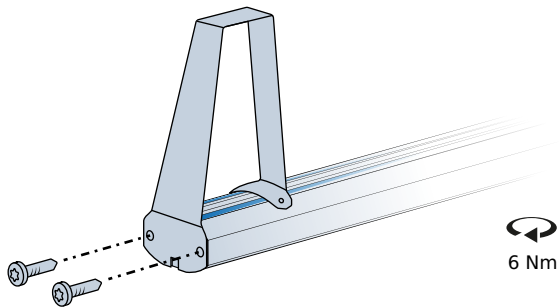



11

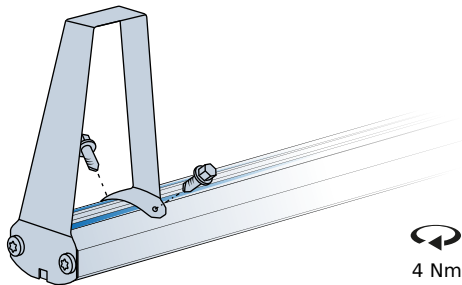

12

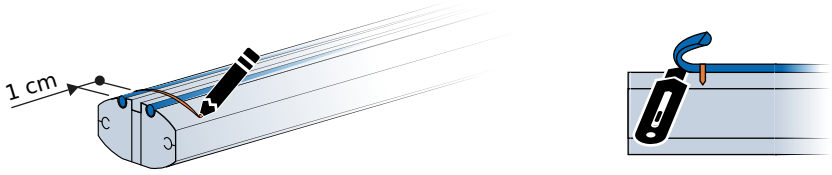


13

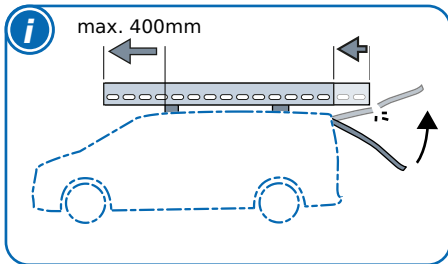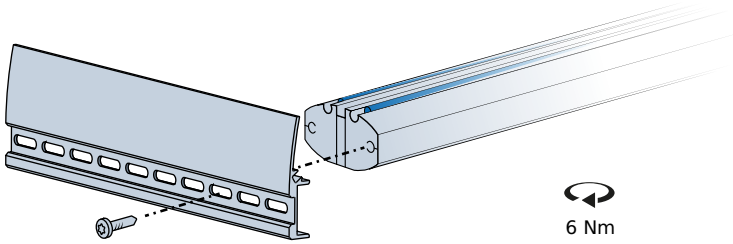





1000005337

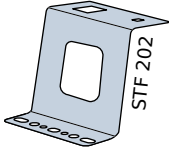

4x 6000003969




2x 6000004027




2x 6000004018



4x 6000004033

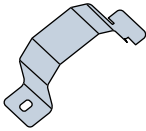

4x 1000005256




4x 6000003535




4x 6000003960



4x MT1016364



2x 6000003957



2x 6000003644



4x 6000011036



4x 6000003942



6000003819




6000003819




1000005397



6000011073



6000011074



6000003849